



REAR NO. 2 SEAT ASSEMBLY

COMPONENTS


SE

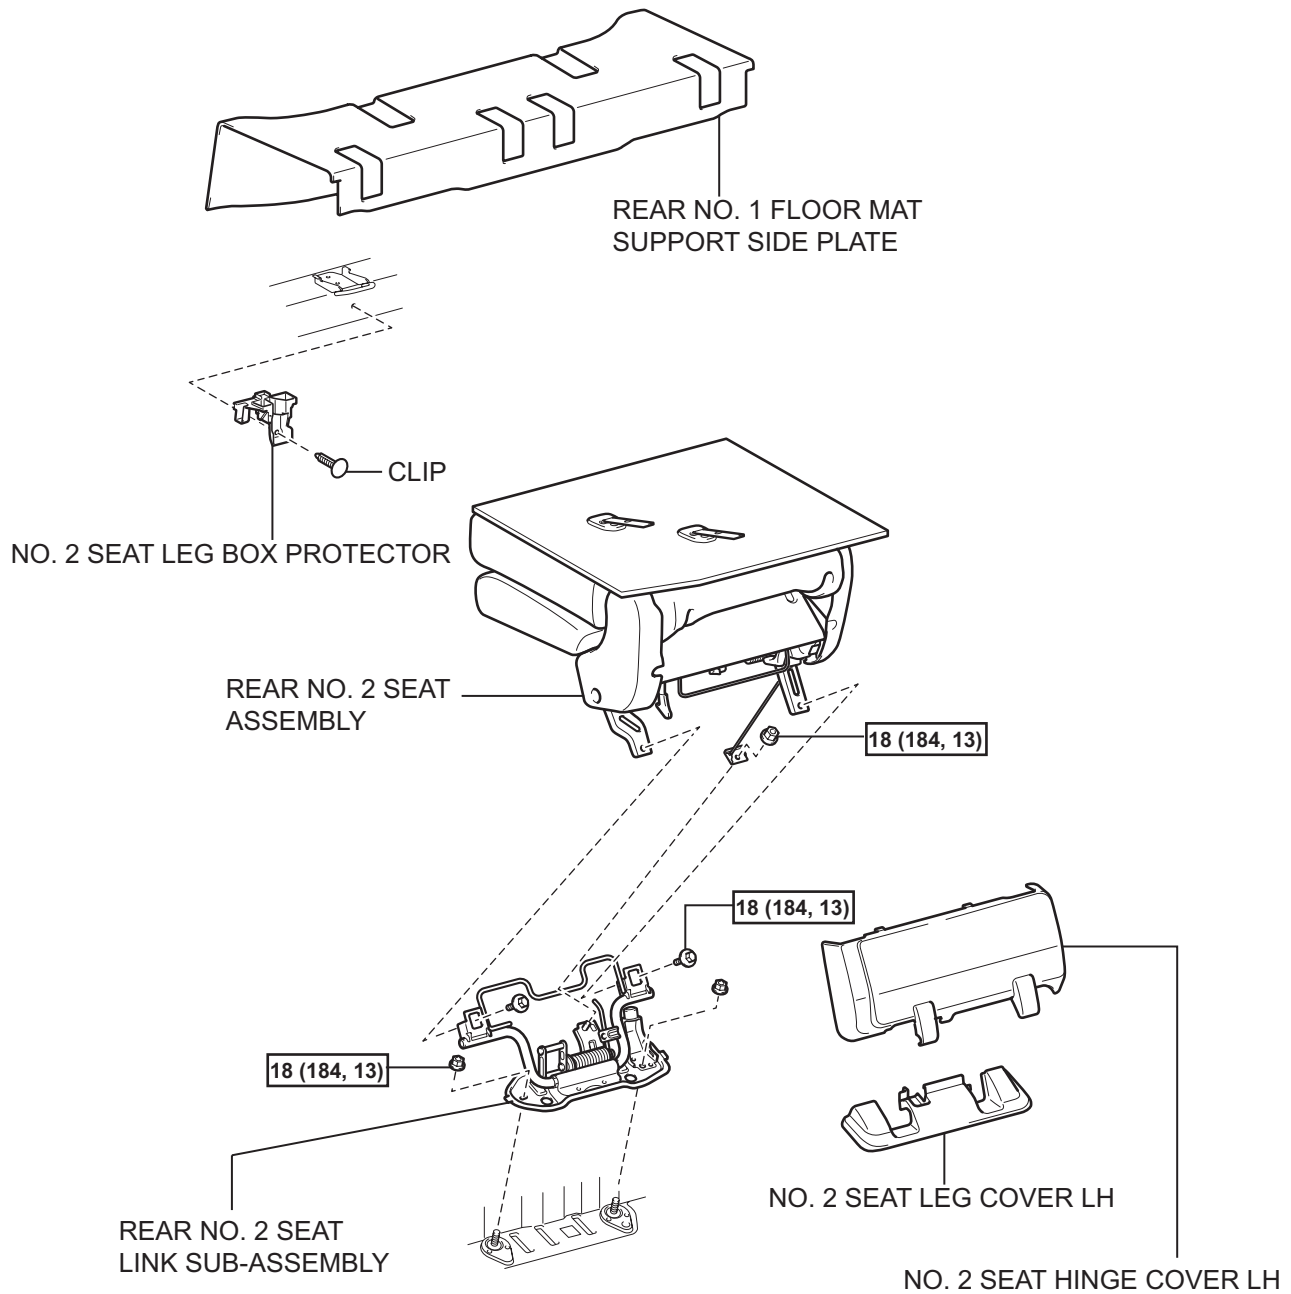

$\boxed{\text{N*m (kgf*cm, ft.*lbf)}}$: Specified torque

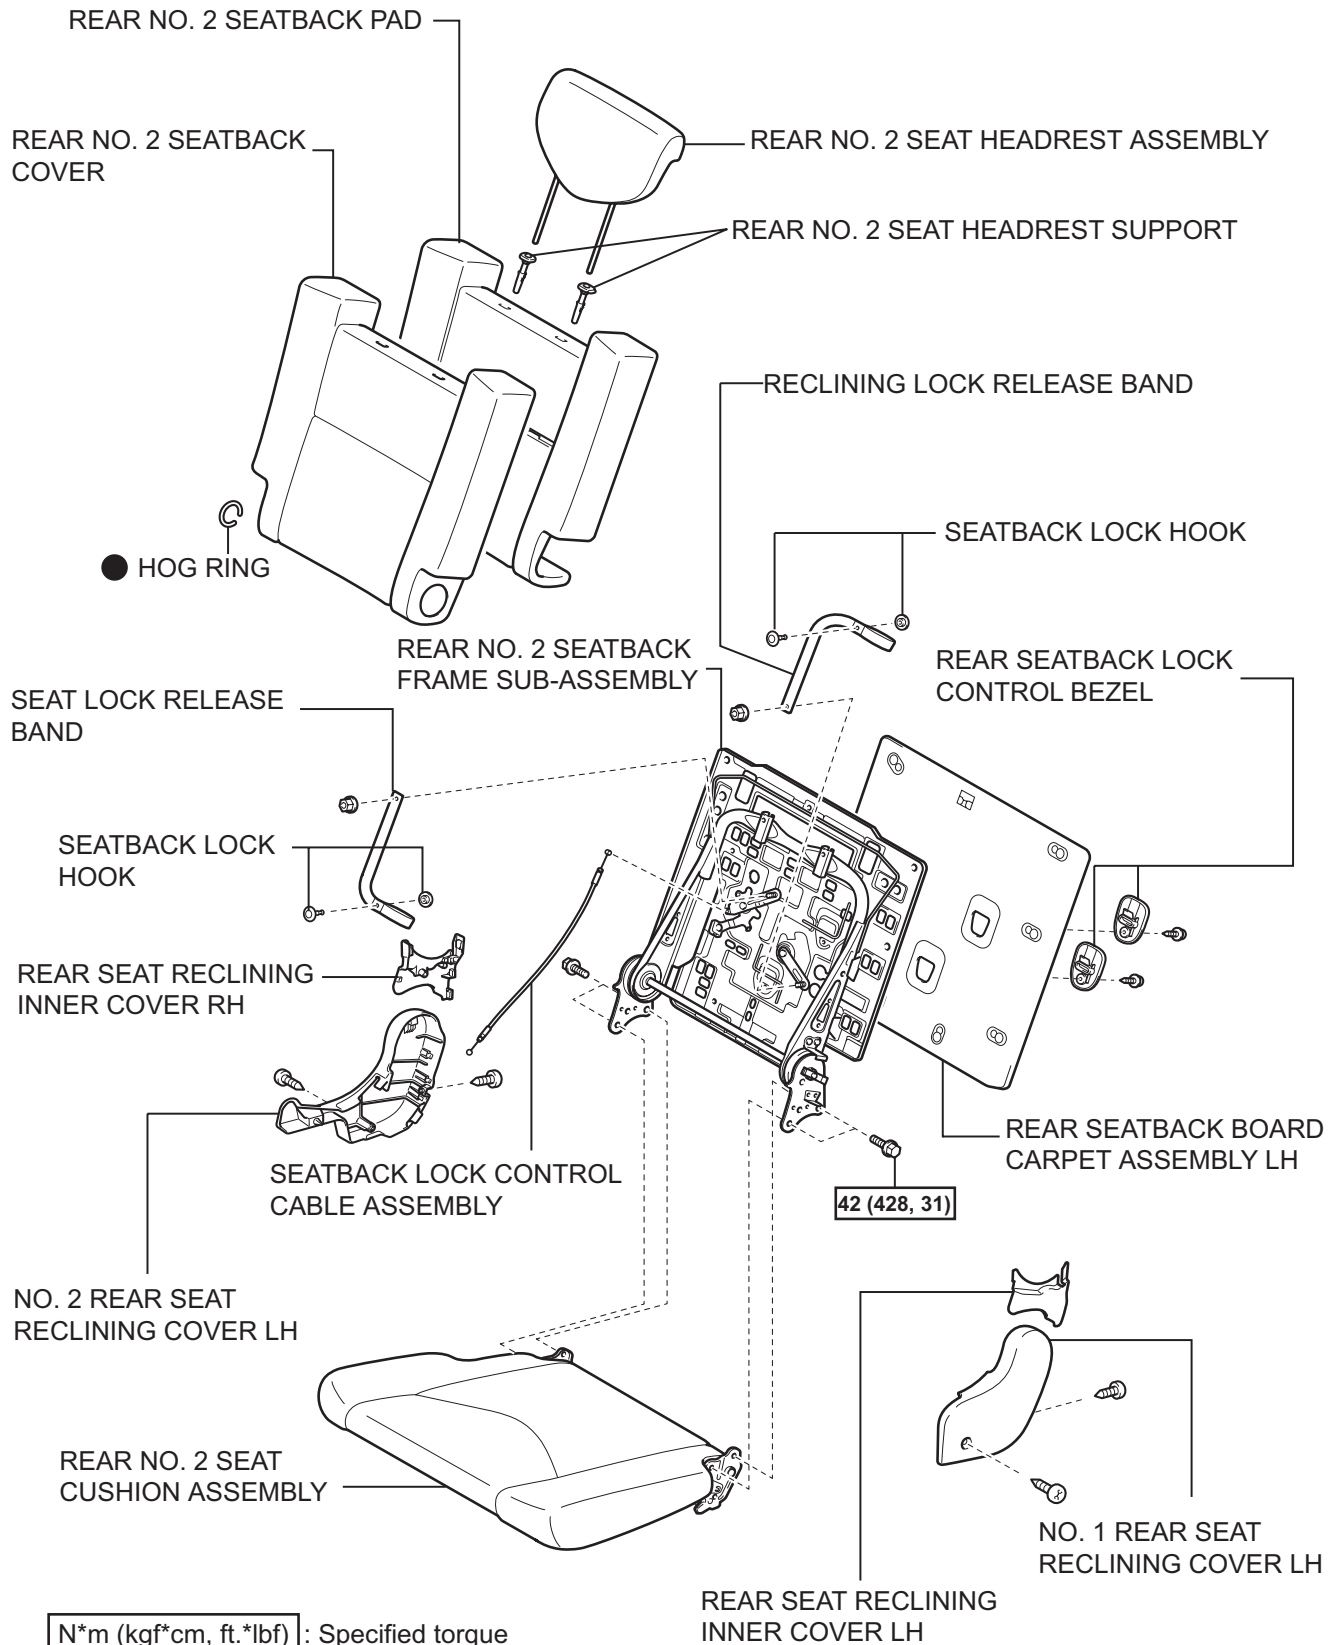

SE

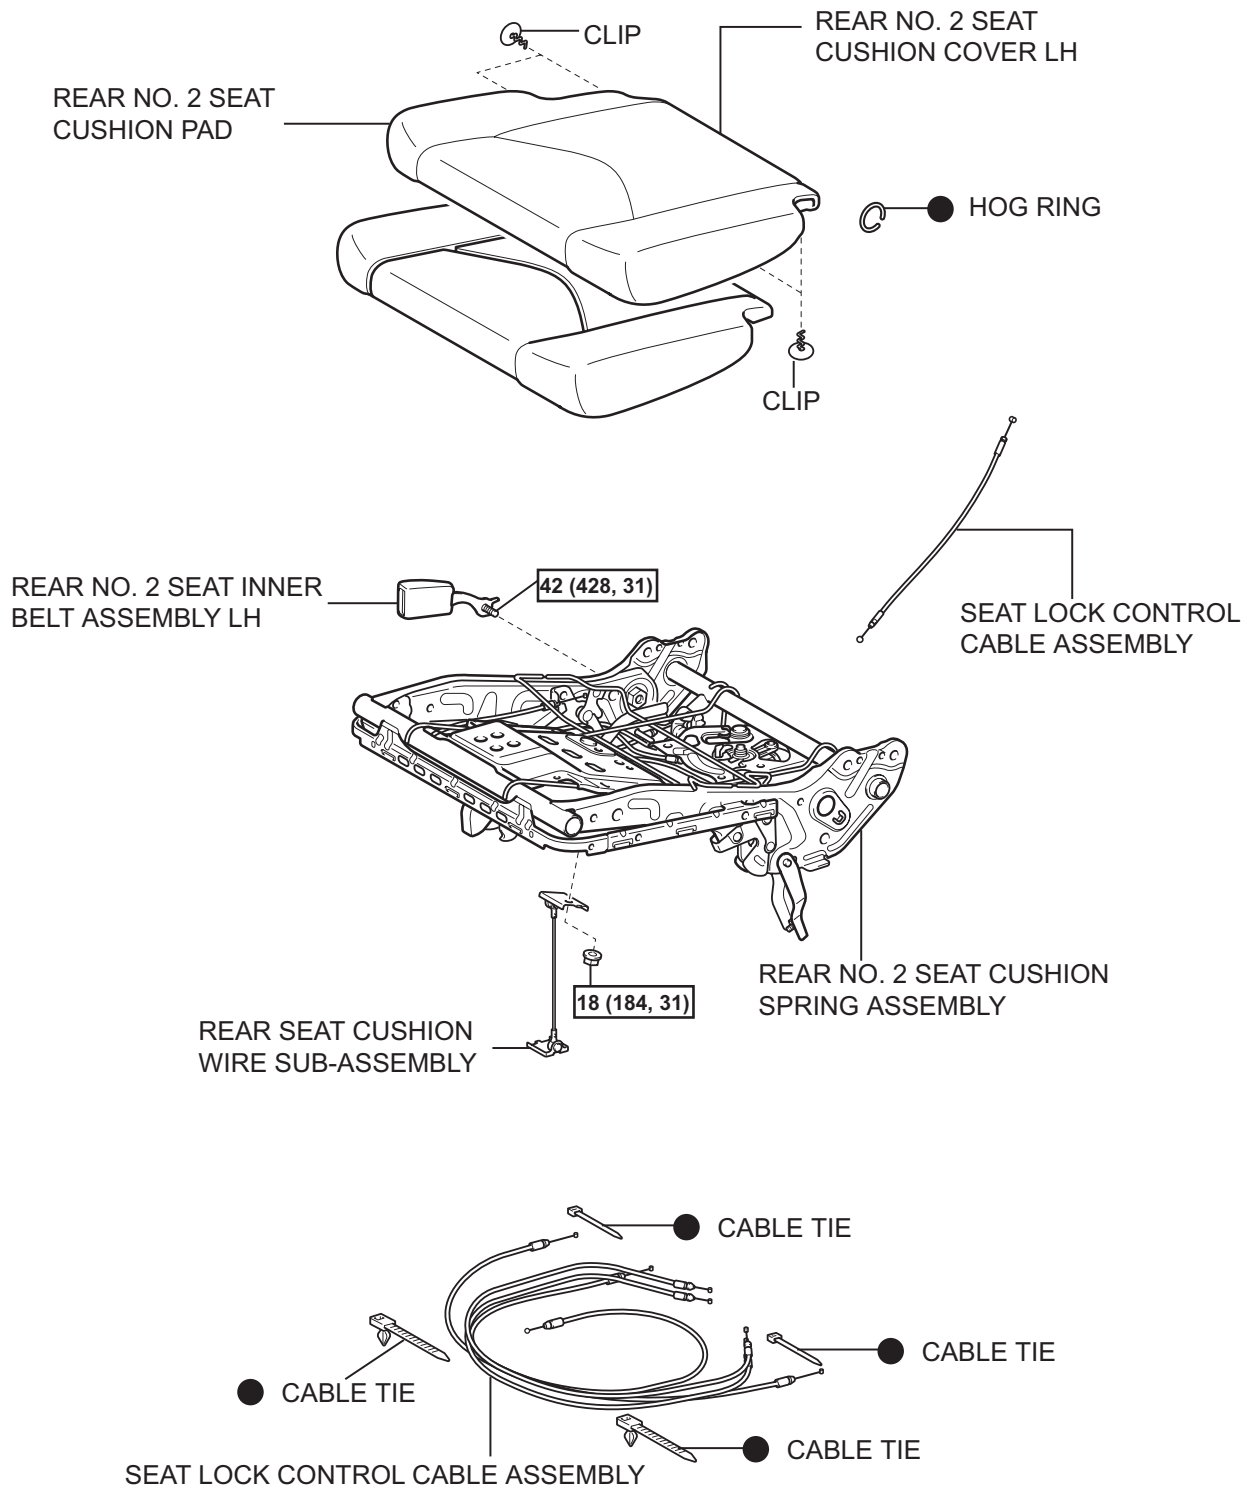

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part



REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.

1. REMOVE NO. 2 SEAT HINGE COVER LH

- Fully tilt the seatback forward.
- Attach the 2 claws and clip.

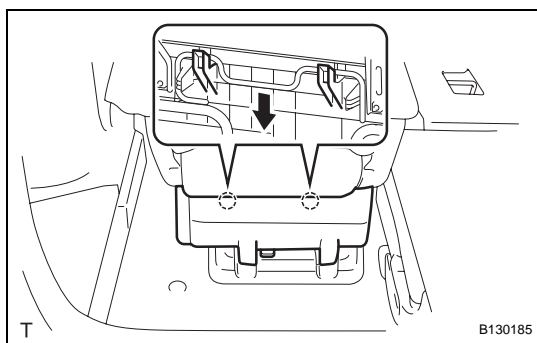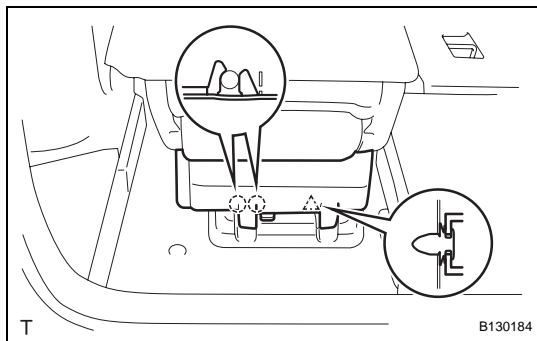


- Pull the hinge cover in the direction indicated by the arrow in the illustration to detach the 2 claws. Then, remove the hinge cover.

2. REMOVE NO. 2 SEAT LEG COVER LH


- Using a screwdriver, detach the 5 claws and remove the leg cover.

HINT:

Tape the screwdriver tip before use.

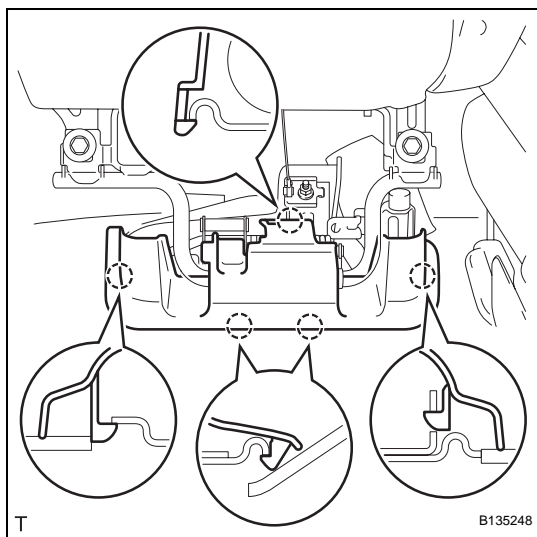


SE

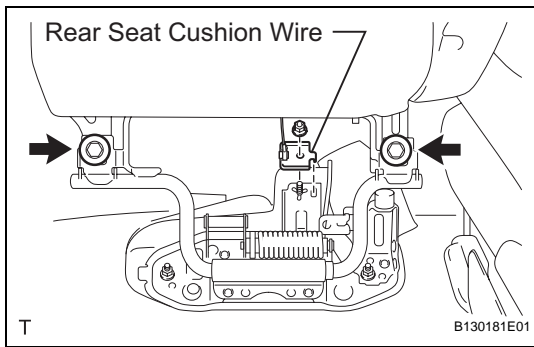


3. REMOVE REAR NO. 2 SEAT ASSEMBLY

- Remove the nut and rear seat cushion wire.
- Remove the 2 bolts. Then disconnect the seat from the rear No. 2 seat link.

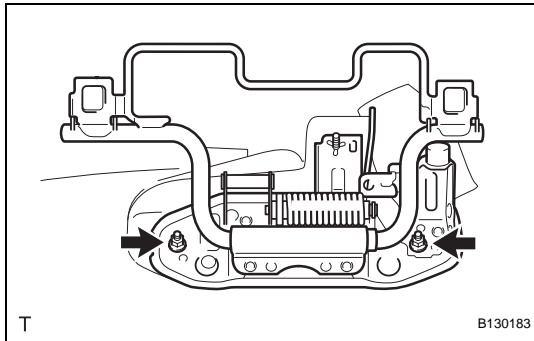

- Remove the 2 nuts and the rear No. 2 seat link.

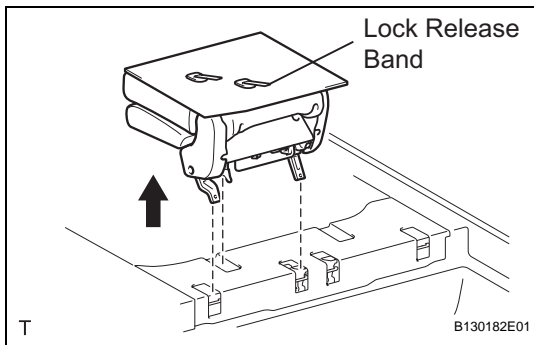


- Pull the lock release band backward and release the 3 seat cushion locks from the lock strikers.
- Lift up and remove the seat.

NOTICE:

Be careful not to damage the vehicle body,

4. REMOVE REAR NO. 1 FLOOR MAT SUPPORT SIDE PLATE

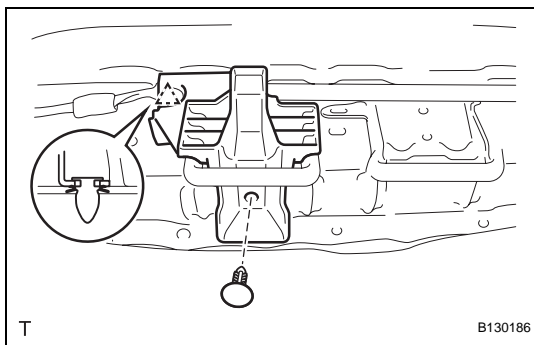

5. REMOVE NO. 2 SEAT LEG BOX PROTECTOR.

- Using a clip remover, remove the clip.
- Detach the clip. Then remove the protector.

DISASSEMBLY

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. REMOVE NO. 1 REAR SEAT RECLINING COVER LH

- Remove the 2 screws.
- Using a screwdriver, detach the 5 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

SE

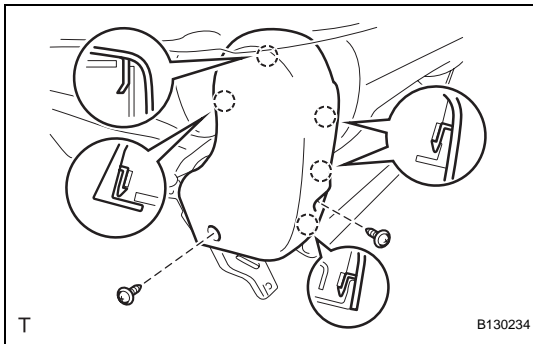


2. REMOVE NO. 2 REAR SEAT RECLINING COVER LH

- Remove the 2 screws.
- Using a screwdriver, detach the 5 claws and clip, and remove the cover.


HINT:

Tape the screwdriver tip before use.

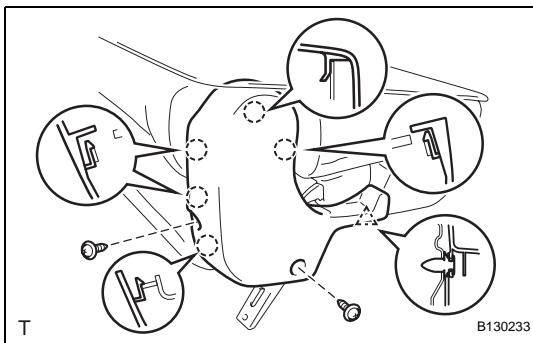


3. REMOVE REAR NO. 2 SEAT CUSHION ASSEMBLY

- Using a clip remover, remove the 2 clips of the seat cushion back side. Then open the seat cushion cover.
- Disconnect the seat lock control cable on the back side from the seat cushion as shown in the illustration.

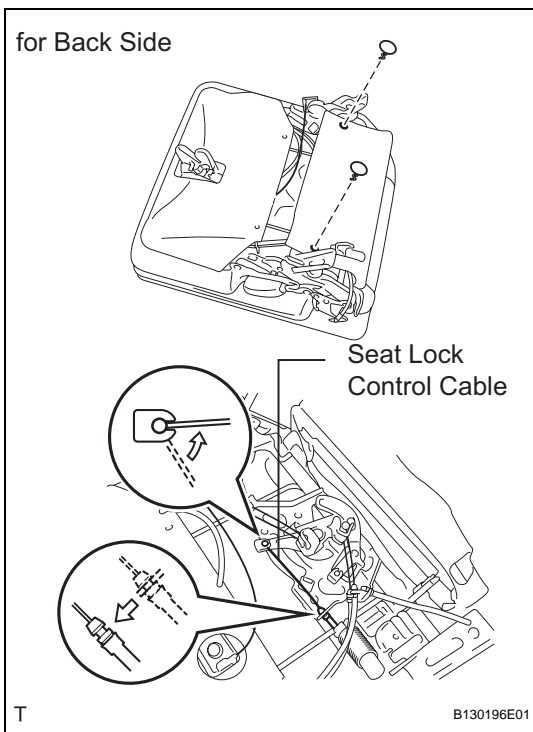

for RH Side

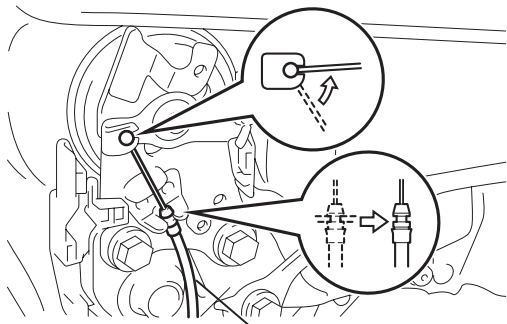

Seat Lock Control Cable


T

B130231E01

- (c) Disconnect the seat lock control cable on the RH side from the seatback as shown in the illustration.

- (d) Remove the 4 bolts and seat cushion.

4. REMOVE REAR NO. 2 SEAT INNER BELT ASSEMBLY LH (See page [SE-110](#))

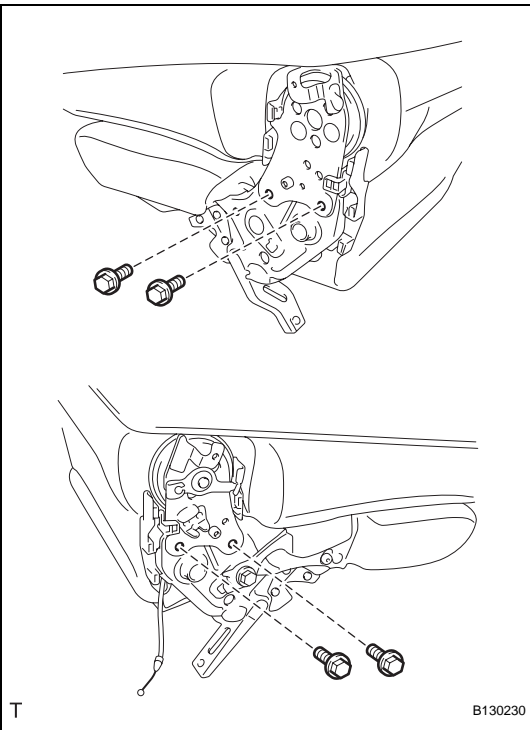

T


B130230

5. REMOVE REAR NO. 2 SEAT CUSHION COVER LH

- (a) Using a clip remover, remove the 2 clips.
 (b) Using a screwdriver, detach the 5 hooks.

HINT:


Tape the screwdriver tip before use.

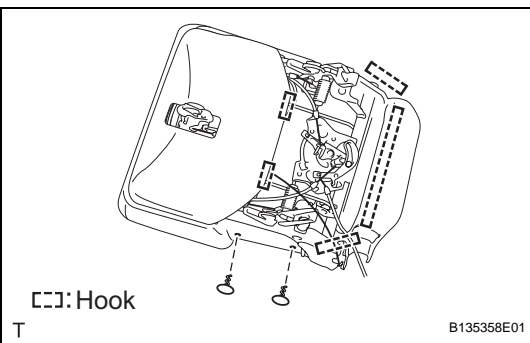


Hook

T


B135358E01

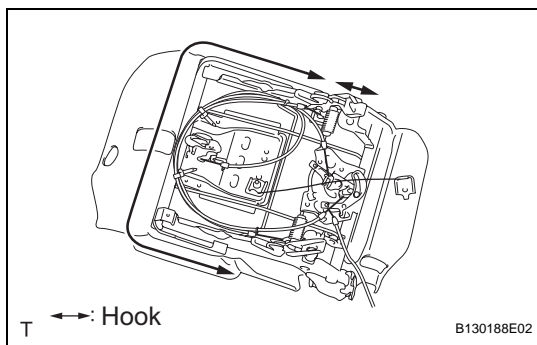

- (c) Using a screwdriver, detach the hooks and remove the seat cushion cover (with pad) from the seat cushion spring.

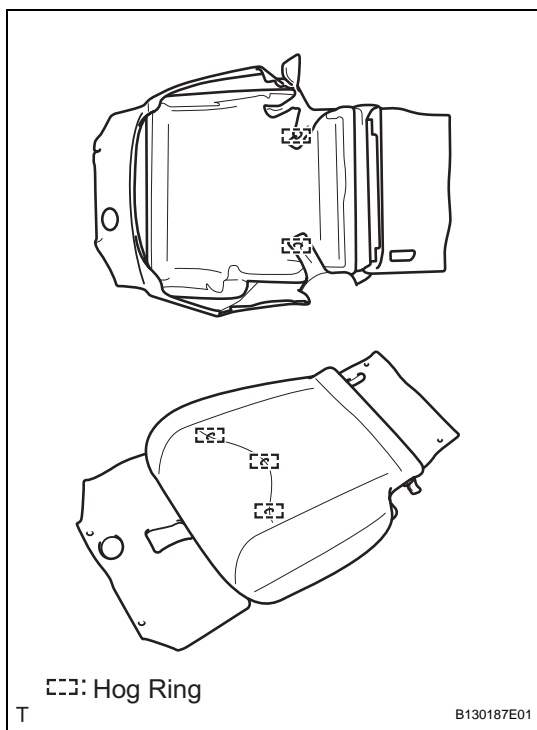


- (d) Remove the 5 hog rings and seat cushion cover from the seat cushion pad.

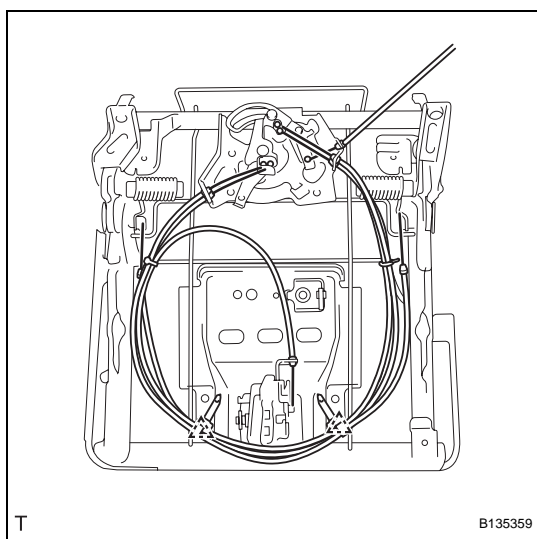

6. REMOVE SEAT LOCK CONTROL CABLE ASSEMBLY

- (a) Using a screwdriver, detach the 2 clamps of the cable tie.

SE

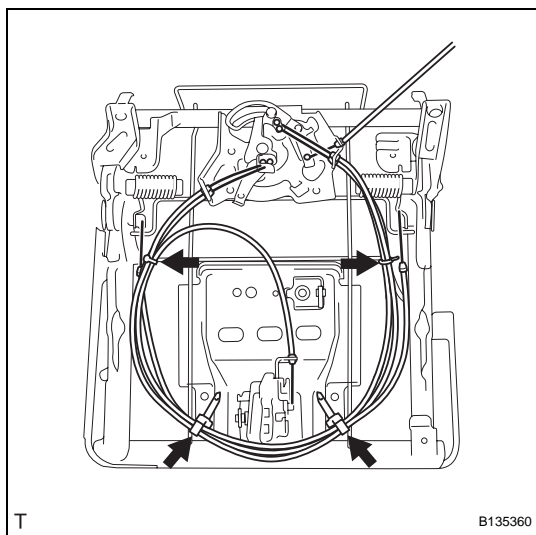


- (b) Cut the 4 cable ties.
- (c) Remove the 5 cables from the seat cushion spring.

7. REMOVE REAR SEAT CUSHION WIRE SUB-ASSEMBLY


- (a) Remove the nut and wire.

8. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY

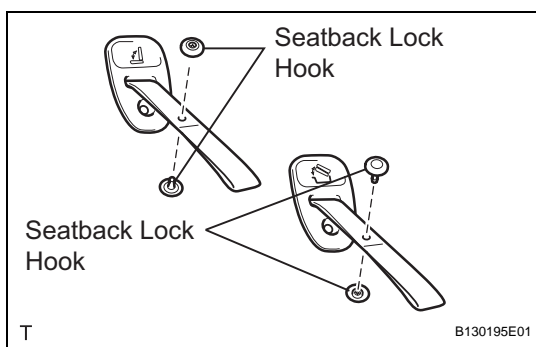


9. REMOVE REAR SEATBACK LOCK CONTROL BEZEL

- (a) Remove the 4 seatback lock hooks.

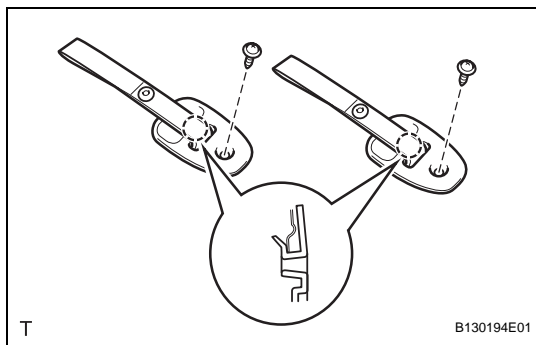

- (b) Remove the 2 screws.
- (c) Detach the 2 claws and remove the bezel.

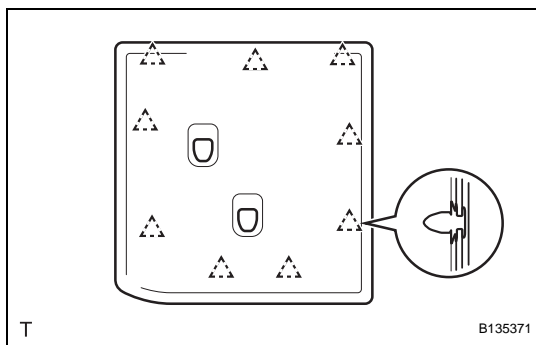


10. REMOVE REAR SEATBACK BOARD CARPET ASSEMBLY LH


- (a) Using a clip remover, detach the 9 clips and remove the seatback board carpet.

NOTICE:


Be careful not to damage the seatback board carpet.

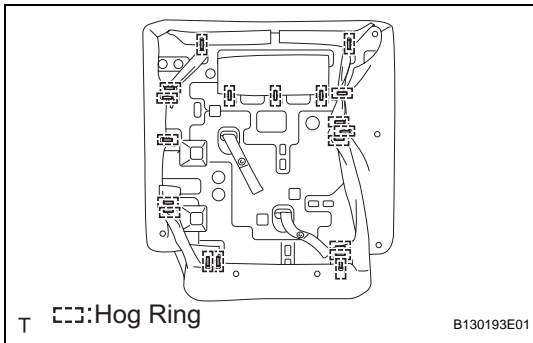**11. REMOVE REAR NO. 2 SEATBACK COVER**


- (a) Remove the 19 hog rings.

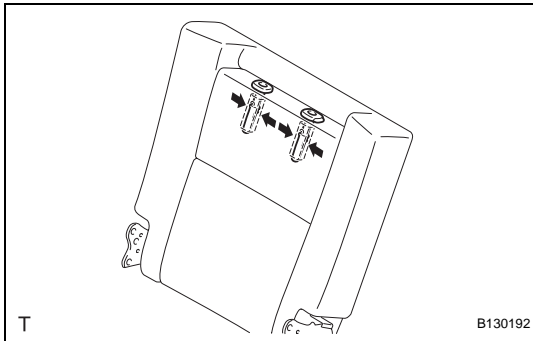

- (b) Detach the 4 claws and remove the 2 headrest supports.
 (c) Remove the seatback cover (with pad) from the seatback frame.

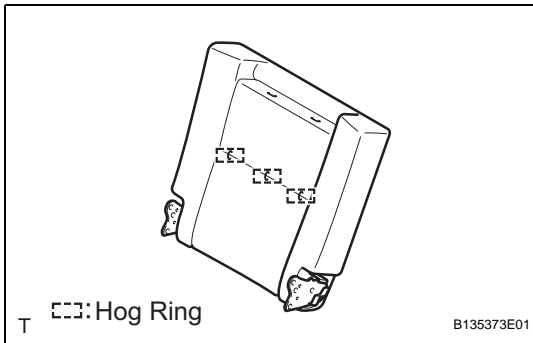

- (d) Remove the 3 hog rings and seatback cover from the seatback pad.

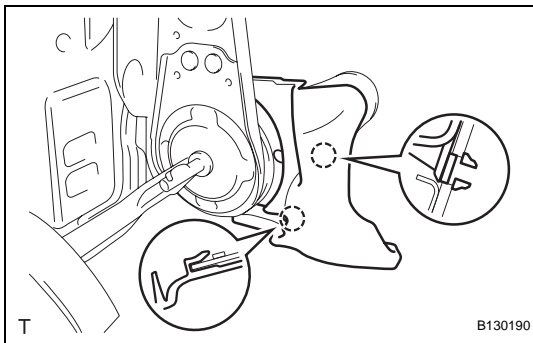**12. REMOVE REAR SEAT RECLINING INNER COVER LH**

- (a) Using a screwdriver, detach the 2 claws and remove the inner cover.


HINT:

Tape the screwdriver tip before use.

13. REMOVE REAR SEAT RECLINING INNER COVER RH

HINT:

Use the same procedures described for the LH side.

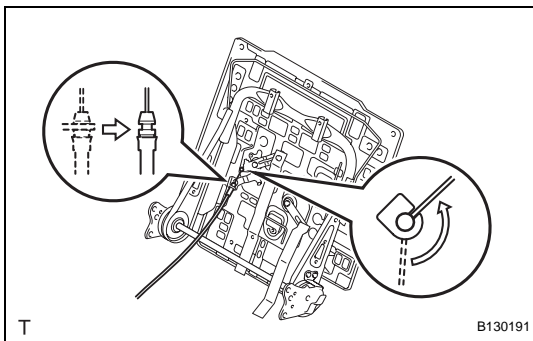**14. REMOVE SEATBACK LOCK CONTROL CABLE ASSEMBLY**

- (a) Remove the cable from the seatback frame as shown in the illustration.

15. REMOVE RECLINING LOCK RELEASE BAND

- (a) Remove the nut and band.

16. REMOVE SEAT LOCK RELEASE BAND

- (a) Remove the nut and band.

REASSEMBLY

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL SEAT LOCK RELEASE BAND

- (a) Install the band with nut.

HINT:

After installing the band, feed it through the seatback frame hole towards the rear of the vehicle.


2. INSTALL RECLINING LOCK RELEASE BAND

HINT:

Use the same procedures described for the LH side.

3. INSTALL SEATBACK LOCK CONTROL CABLE ASSEMBLY

- (a) Install the cable to the seatback frame as shown in the illustration.

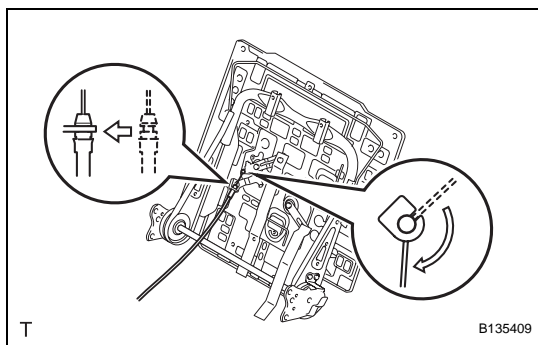

4. INSTALL REAR SEAT RECLINING INNER COVER LH

- (a) Attach the 2 claws to install the inner cover.

5. INSTALL REAR SEAT RECLINING INNER COVER RH


HINT:


Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEATBACK COVER


NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.

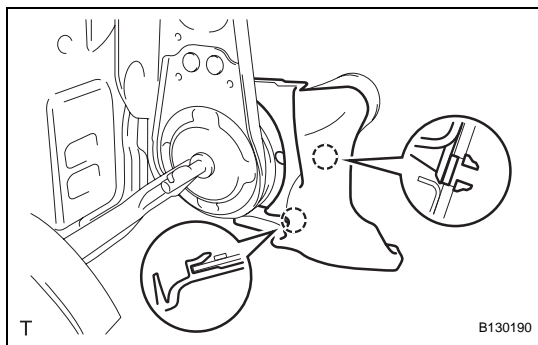


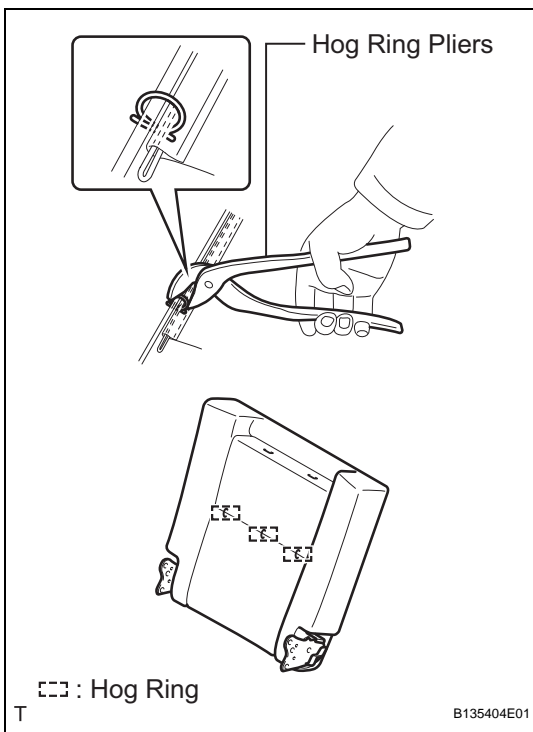

- (a) Using hog ring pliers, install the seatback cover to the seatback pad with 3 new hog rings.
- (b) Install the seatback cover (with pad) to the seatback frame.

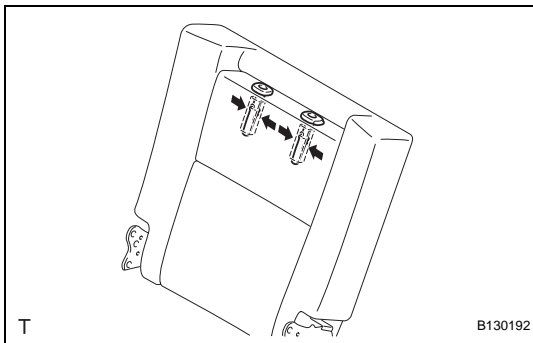


- (c) Attach the 4 claws to install the 2 headrest supports.

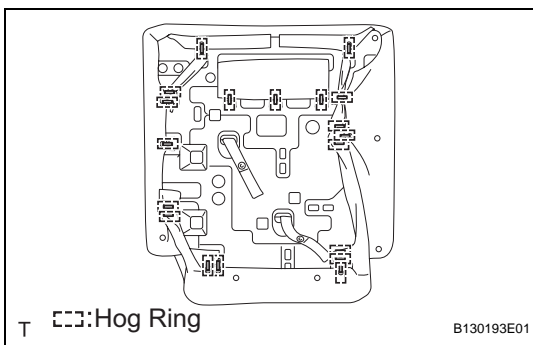

- (d) Using hog ring pliers, install 19 new hog rings.


7. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY LH

- (a) Pass the 2 release bands through the 2 holes in the seatback board carpet.

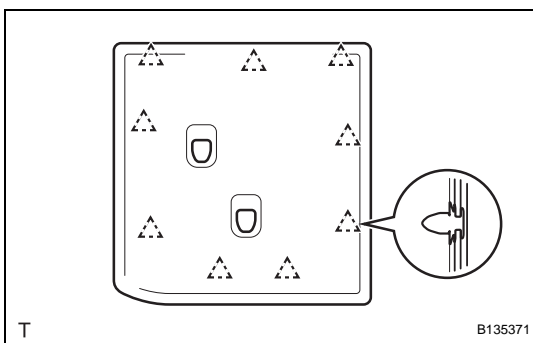


- (b) Attach the 9 clips to install the carpet.
HINT:
Make sure that the release band is not inside the seatback board carpet.

SE

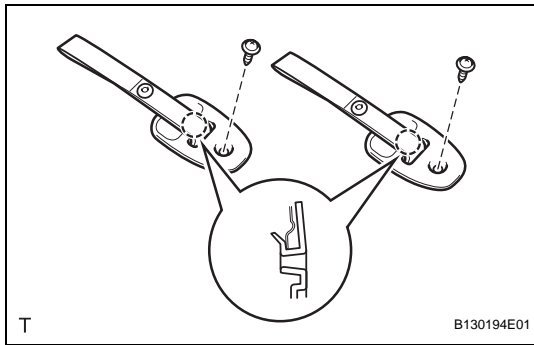**8. INSTALL REAR SEATBACK LOCK CONTROL BEZEL**


- (a) Pass the 2 release bands through the 2 holes in the 2 bezels.
- (b) Attach the 2 claws to install the 2 bezels.
- (c) Install the 2 screws.

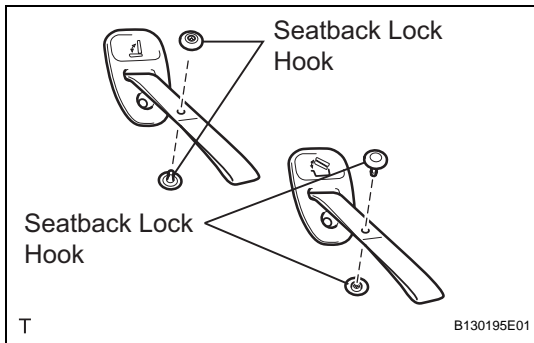


- (d) Install the 4 seatback lock hooks.

9. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY**10. INSTALL REAR SEAT CUSHION WIRE SUB-ASSEMBLY**


- (a) Install the wire with the nut.
Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

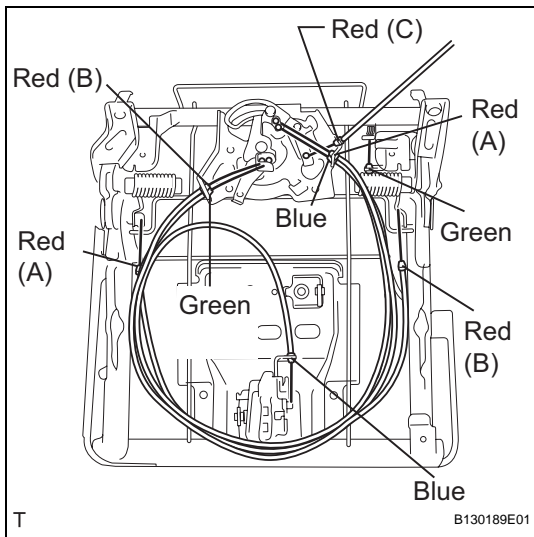**11. INSTALL SEAT LOCK CONTROL CABLE ASSEMBLY**


- (a) Install the 5 cables to the seat cushion spring as shown in the illustration.

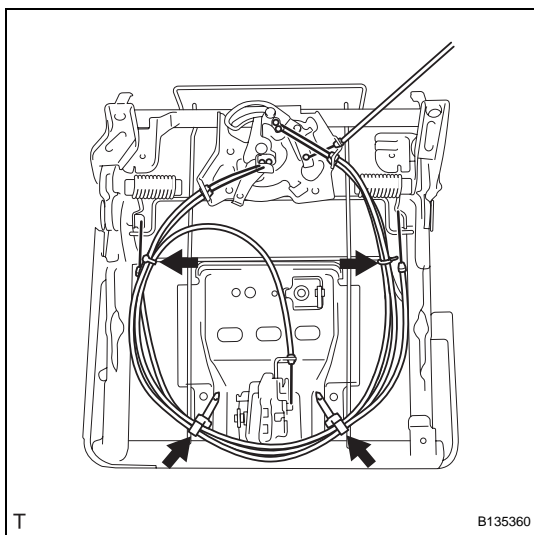

- (b) Clamp the cables to the seat cushion spring with 4 new cable ties as shown in the illustration.

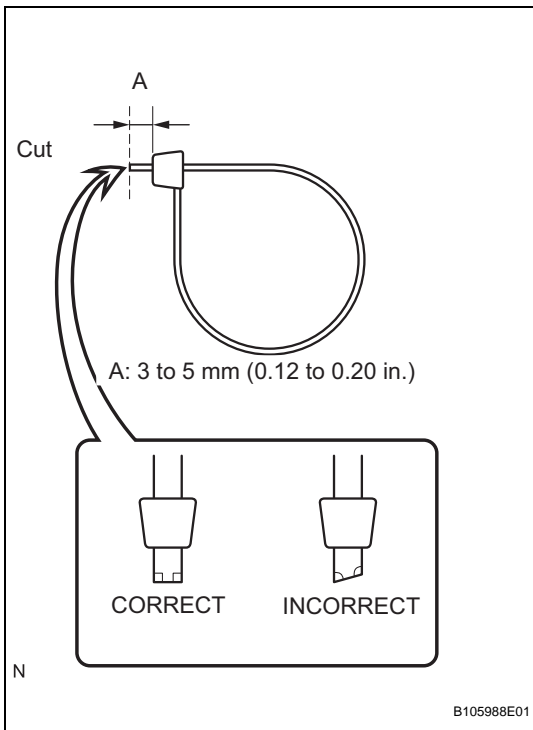

(c) Cut off the 2 cable ties, as shown in the illustration.

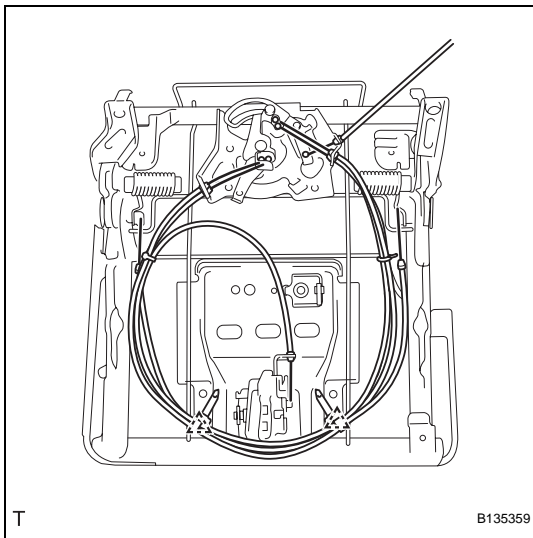


(d) Attach the 2 clamps of the cable tie to the seat cushion spring.


12. INSTALL REAR NO. 2 SEAT CUSHION COVER LH NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, avoid wrinkling the cover.


SE

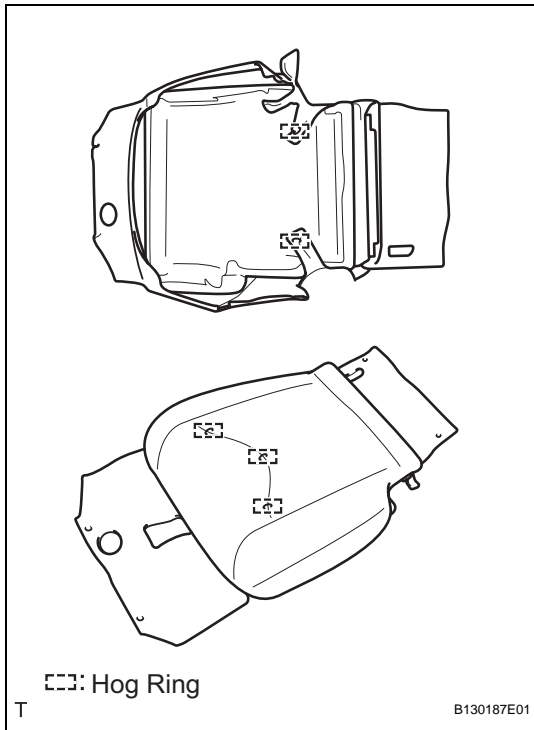

- (a) Using hog ring pliers, install the seat cushion cover to the seat cushion pad with 5 new hog rings.

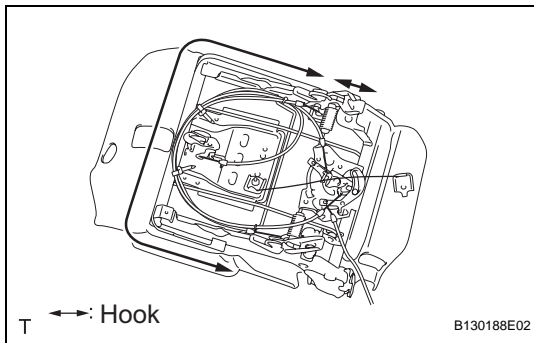


- (b) Attach the hooks and install the seat cushion cover (with pad) to the seat cushion spring.

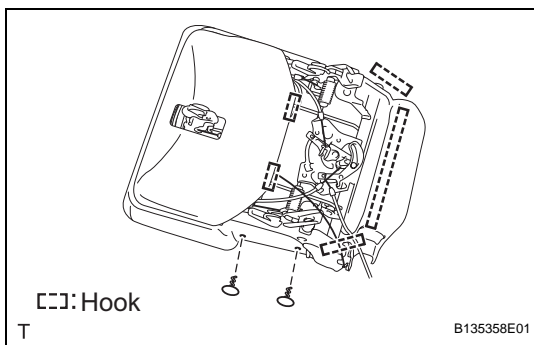

- (c) Attach the 5 hooks.
(d) Install the 2 clips.


13. INSTALL REAR NO. 2 SEAT INNER BELT ASSEMBLY LH (See page [SB-40](#))

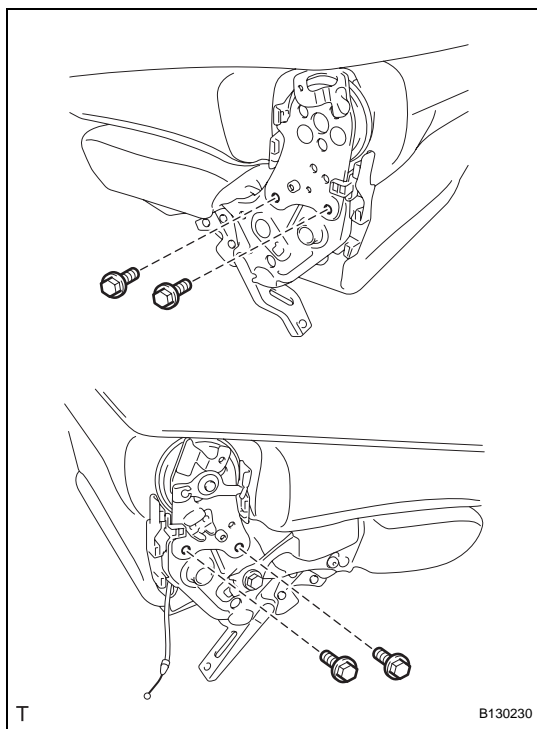**14. REMOVE REAR NO. 2 SEAT CUSHION ASSEMBLY**

- (a) Install the seat cushion to the seatback with the 4 bolts.


Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

SE

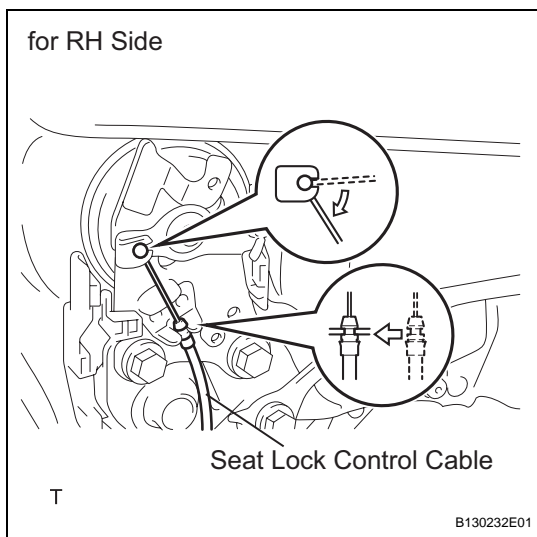

- (b) Connect the seat lock control cable of the RH side to the seatback as shown in the illustration.


for Back Side

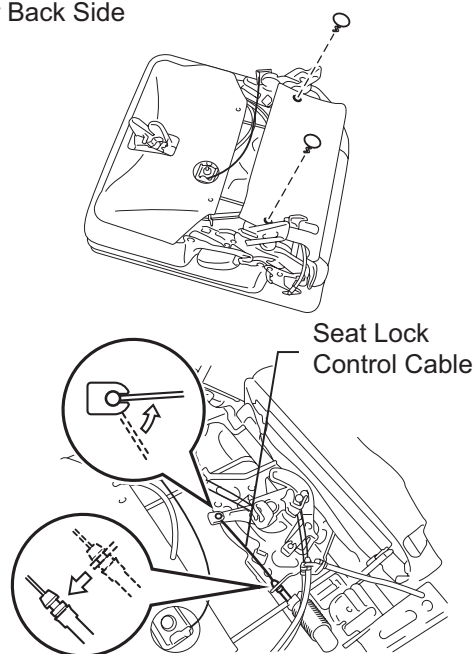Seat Lock
Control Cable

T

B130196E02

- (c) Connect the seat lock control cable of the back side to the seat cushion as shown in the illustration.
- (d) Close the seat cushion cover and install the 2 clips.

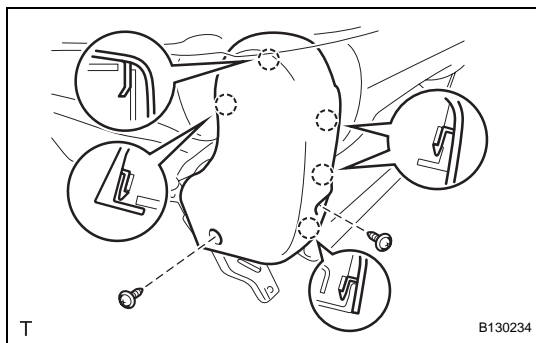


T

B130234

15. INSTALL NO. 1 REAR SEAT RECLINING COVER LH

- (a) Attach the 5 claws to install the cover.
- (b) Install the 2 screws.

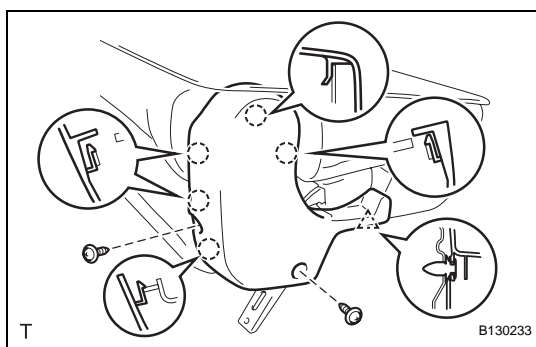

T

B130233

16. INSTALL NO. 2 REAR SEAT RECLINING COVER LH

- (a) Attach the clip and 5 claws to install the cover.
- (b) Install the 2 screws.


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL NO. 2 SEAT LEG BOX PROTECTOR


- Attach the clip to install the protector.
- Install the clip.

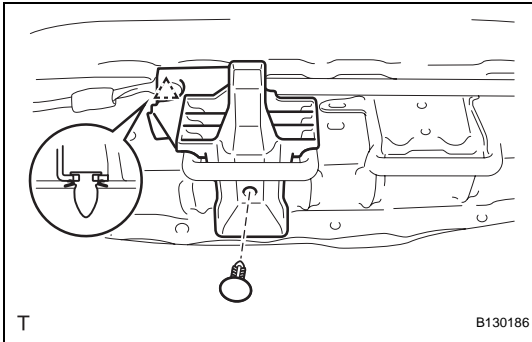

2. INSTALL REAR NO. 1 FLOOR MAT SUPPORT SIDE PLATE

3. INSTALL REAR NO. 2 SEAT ASSEMBLY


- Fully tilt the seatback forward.

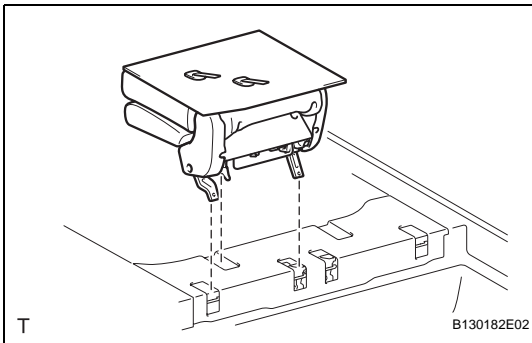


- Place the seat onto the lock striker.
- Fully lock the seat to the lock striker.

HINT:

- Lock the rear side, then lock the front side.
- Confirm that the seat is firmly locked to the lock striker.

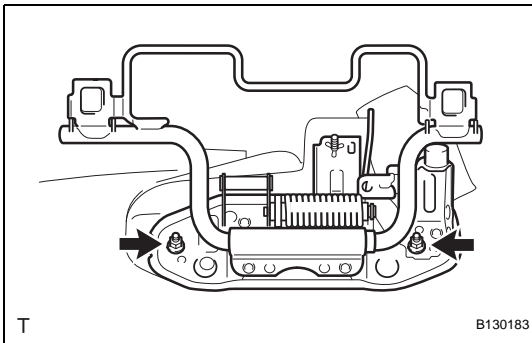


- Install the rear No. 2 seat link with the 2 nuts.
Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

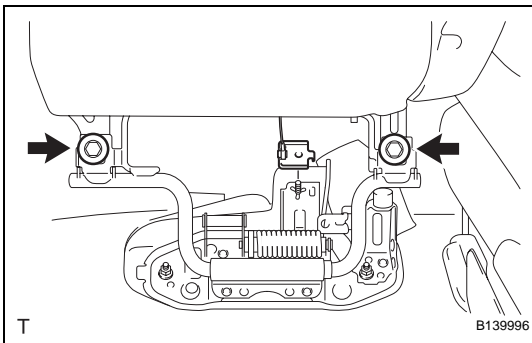

- Install the seat to the rear No. 2 seat link with the 2 bolts.

Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)

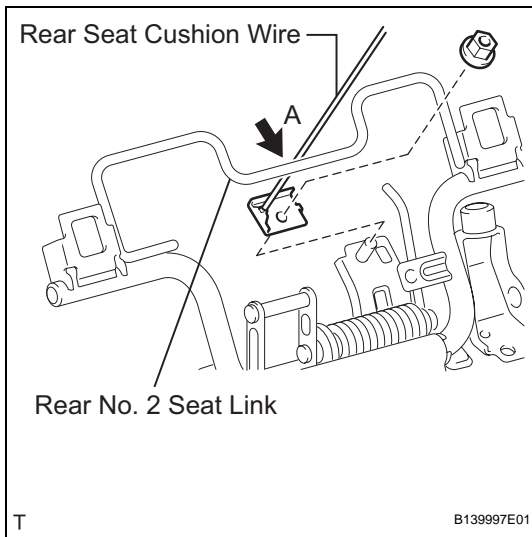

- (f) Pass the rear seat cushion wire underneath the rear No. 2 seat link part labeled A.

NOTICE:


If the wire is not installed as described, the seat will not move properly.

- (g) Install the rear seat cushion wire to the rear No. 2 seat link with the nut.

Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf)


4. INSTALL NO. 2 SEAT LEG COVER LH

- (a) Attach the 5 claws to install the leg cover.

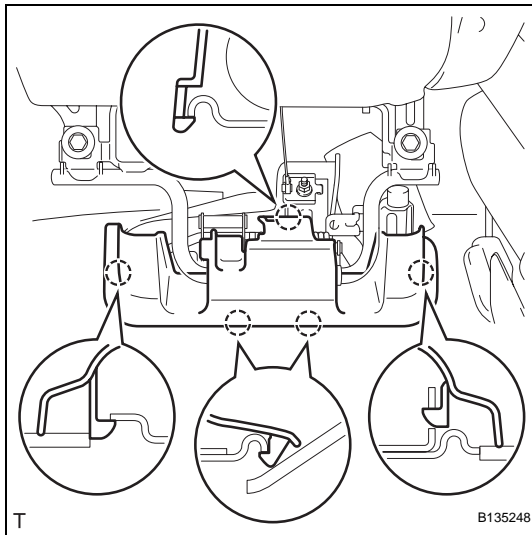

5. INSTALL NO. 2 SEAT HINGE COVER LH

- (a) Push the hinge cover in the direction indicated by the arrow in the illustration to attach the 2 claws.

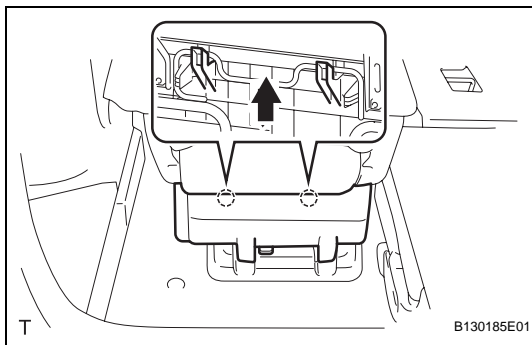

- (b) Attach the 2 claws and clip to install the hinge cover.
(c) Return the seatback to the upright position.

